

Quick Start Guide

Pocket
Home
PC

Contents

1. What's in the Box	3
2. The Pocket PC Phone.....	4
3. Getting Ready	8
4. Making a Call	12
5. Synchronizing Outlook Information.....	13
6. Setting Up E-mail Accounts	14
7. Sending a Message.....	16
8. Browsing the Internet	17
9. Using the Camera	18
10. Using Pictures & Videos	19
11. Entering Information	21
12. Customizing Your Pocket PC Phone	22
13. Securing Your Pocket PC Phone	23
14. The Subdisplay	24
15. Status Indicators.....	25
16. More Information	28

1. What's in the Box



AC Adapter



Battery



Carrying Case



**User Manual and
Quick Start Guide**



USB Sync Cable



Device



**Getting Started and
Application Discs**



Headset




Extra Stylus




VGA Out cable

2. The Pocket PC Phone

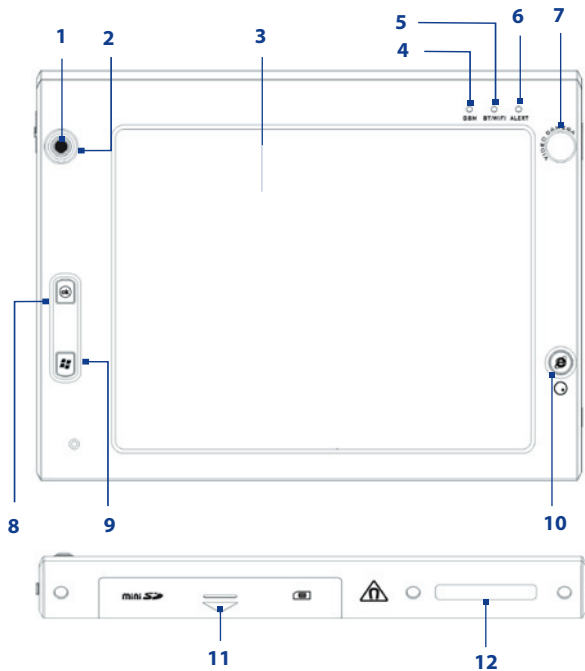

No.	Item	Function
1	Navigation Control / CENTER OK button	Press this multi-directional control up, down, left, or right to move through menus and program instructions; carry out the selection by pressing the CENTER OK button.
2	Notification LED 1	This LED shows battery charging status.
3	Touch Screen	Tap the screen with the stylus to write, draw, or make a selection.
4	Notification LED 2	This LED shows the GSM/UMTS standby/network status (Green). and GPS indicator (Red)
5	Notification LED 3	This LED shows the following: <ul style="list-style-type: none"> • A flashing Blue light for Bluetooth system notification of powered-up and ready to transmit radio frequency signal. • A flashing Green light for Wi-Fi status. • When both Bluetooth and Wi-Fi are enabled, their lights flash alternately.
6	Notification LED 4	This LED shows messages and notifications.
7	Second Camera	Use this camera for video call conversations or to take self portrait photos.
8	OK Button	Press to confirm your data entries, or to exit the program in use.
9	START Button	Press to open the Start menu.
10	Web Browser / VueFLO Button	Press to launch the Internet Explorer Mobile or Opera Browser and automatically go to the home page selected by default. Depending on the Web browser selected in VueFLO settings, press this button to activate VueFLO when browsing the Web.
11	Battery Compartment	Open this compartment to insert the SIM/USIM card, miniSD™ card and battery.
12	Keyboard Copper Connector	Attach the copper part of the keyboard to this to be able to use the keyboard. See "Using the Hardware Keyboard" in chapter 2 of the User Manual to learn how to attach the keyboard to the main unit.

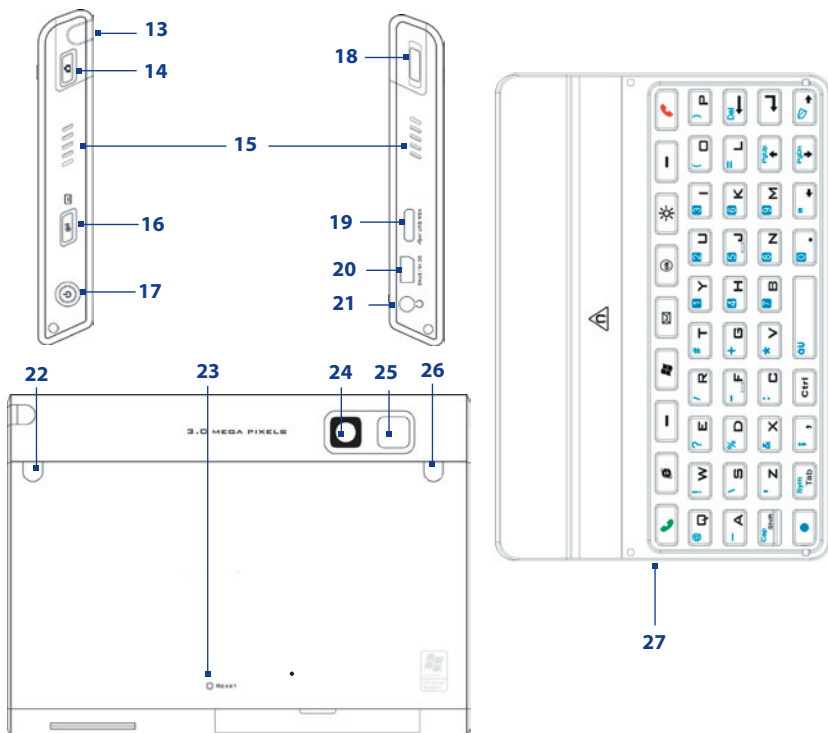

No.	Item	Function
13	Stylus	Use the stylus to write, draw, or select items on the touch screen.
14	CAMERA Button	Press to launch the Camera; press again to take a photo or video clip, depending on the specified capture mode.
15	Speaker	Listen to audio files and voice calls here.
16	COMM MANAGER/ VOICE RECORDER button	Press to open Comm Manager. Press and hold to open the Voice Notes program.
17	POWER Button	<ul style="list-style-type: none"> Press to turn off the display temporarily. This switches your device to Sleep mode. You can still receive calls and messages when your device is in Sleep mode. Press and hold (for about 5 seconds) to turn off the power completely.
18	Volume Slider	<ul style="list-style-type: none"> Slide up or down to adjust the speaker volume. During a call, slide up or down to adjust the earpiece volume.
19	VGA Out/USB port	Use this connection to output the contents on the screen to an external device using the provided VGA out cable. This also acts as a USB 1.1 port to connect USB peripherals.
20	HTC ExtUSB™ Sync Connector/Earphone Jack	Use this connector to synchronize data by connecting the provided USB Sync cable or to recharge the battery via the provided AC adapter. You can also connect the provided USB stereo headset for hands-free conversation or for listening to audio media.
21	3.5 mm Earphone Jack	Lets you listen to audio media, use a hand-free kit or plug in a microphone.
22	Car Antenna Connector	Connect your device to the car antenna while in a car to have better reception quality.
23	RESET Button	With the stylus, press the RESET button to soft-reset your device.
24	Camera	Use the camera to take still photos and record video clips.
25	Flash Light	When turned on, it illuminates your subject and allows you to capture clear photos or video even in a dark environment. It also flashes when a photo is taken.
26	GPS Antenna Connector	If you need better GPS signal reception, you can connect an external GPS antenna.
27	QWERTY keyboard	This is similar to a standard PC keyboard. Connect to the device to use the keyboard. This also acts as a protective cover for the device screen.

No.	Accessory	Function
1	AC adapter	Recharges the battery.
2	USB Sync cable	Connects your device to a PC and synchronize data.
3	Stereo headset	Provides a volume control slider and a Send/End button. Press the Send/End button to pick up a call or put a call on hold; press and hold the button to end the call.
4	Carrying case	Act as a protective carrying case for your device.
5	VGA Out cable	Connects your device to an external viewing device. You can output the contents on the device's screen to an external viewing device.


3. Getting Ready

Before you start using your device, you must install a USIM/SIM card and a charged battery. The USIM/SIM card contains your phone number and service details, and it stores phonebook entries and your messages.

If you need more storage for your device, you can also insert a miniSD memory card.

Install the USIM/SIM card


1. Make sure your device is turned off.
2. Open the battery door at the bottom of the device by sliding it down to the arrow's direction.
3. Flip open the USIM/SIM card slot cover.
4. Insert the USIM/SIM card into the card holder with its gold contacts facing up and then close the cover. (The cut-off corner of the USIM/SIM card should match the cut-off corner in the USIM/SIM card slot.)

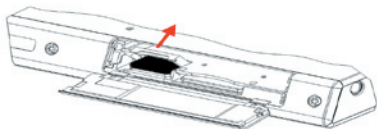

5. Close the battery compartment.

Install the miniSD card

1. Make sure your device is turned off.
2. Open the battery compartment at the bottom of the device.
3. Insert the miniSD card into the card holder with its gold contacts facing up and close the battery compartment.


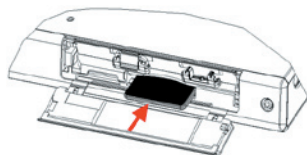


To remove the miniSD card, press it to pop it out of the slot.

Install and charge the battery

New batteries are shipped partially charged. Before you start using your device, it is recommended that you install and charge the battery.


To install the battery, open the battery compartment of the device and then insert the battery by aligning the exposed copper part of the battery pack with the protruding copper conductor which is on the inside-left side of the battery slot. Gently push the battery until it locks into place, push the lock down and then close the compartment.

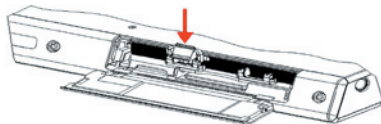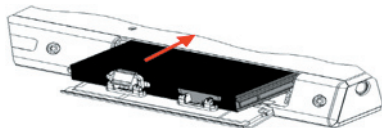


Some batteries perform best after several full charge/discharge cycles. You can charge the battery in two ways:

- Connect your device directly to an electrical outlet using the AC adapter.
- Plug the sync cable to the USB port on your PC and to the sync connector on your device.





When your device is turned off, charging is indicated by a solid amber light on the LED indicator. When your device is turned on, charging is indicated by a solid amber light on the LED indicator as well as a charging icon () on the Today screen.

After the battery has been fully charged, the LED indicator becomes green and a full battery icon () appears on the Today screen.


To remove the battery


If you need to replace the battery, follow the procedure below to remove the battery from the device.

1. Make sure your device is turned off.
2. Open the Battery compartment at the bottom of the device.
3. Pull up the silver-coloured lock on the battery.
4. Draw out the battery from its slot.

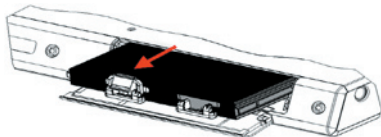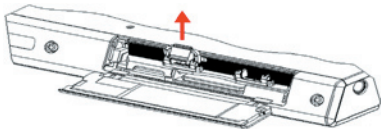

Check the battery power

- Tap the battery level icon () on the Today screen. The Power Settings screen will then open where you can see the current battery power level.

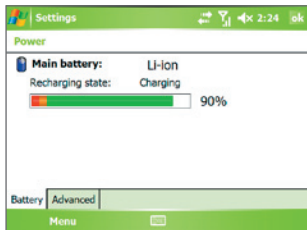

Battery power indicator

When the battery power gets very low, a warning message will be displayed. When you see this, immediately save your data by synchronizing with your PC, or save your data on a secondary storage card, and then turn off your device. Do not attempt to restart your device until you have connected it with the power adapter.

Turn on your Pocket PC Phone

Press POWER to turn on your device. When you turn on your device for the first time, a Quick Start Wizard will guide you through the screen calibration process and the setup of regional settings, date and time, password, Outlook e-mail, and POP3/IMAP4 e-mail accounts.

To turn off your device, press POWER again.



4. Making a Call


Like a standard mobile phone, you can use your device to make, receive, and keep track of phone calls and send SMS messages.

IMPORTANT You need to have a wired or Bluetooth headset connected to your device to talk to or to hear the other party.

 
The Phone screen


From the Phone screen, you can access Call History, Speed Dial, and Phone settings. To open the Phone screen, tap **Start > Phone**.

Make a voice call


- On the Phone screen, tap the phone number you want to call, then tap .

Make a video call

- On the Phone screen, tap the phone number you want to call, then tap .

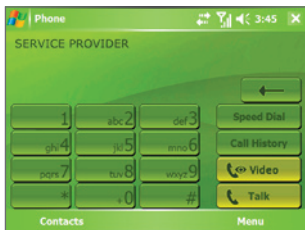

Phone screen

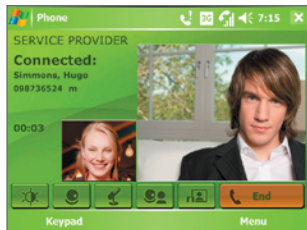


Video Call screen

Note The other party's image will appear on the screen about 3 to 5 seconds after a connection is established, depending on the signal strength. The streaming image quality may also be influenced by the signal.

5. Synchronizing Outlook Information

Using Microsoft® ActiveSync®, you can synchronize information on your device with information on your PC, such as Outlook content. ActiveSync is already installed on your device, but you need to install it on your PC if you don't already have it. Insert the **Getting Started Disc** into the CD drive of your PC. Follow the instructions on the installation wizard screen to install ActiveSync. Once installation is completed, connect the sync cable to your device and plug it into your PC's USB port.

To set up a partnership between your device and the PC, turn on your device. When the PC detects a USB connection, it starts the **ActiveSync Synchronization Setup Wizard**. Follow the instructions on the screen and select the Outlook items you want to synchronize.

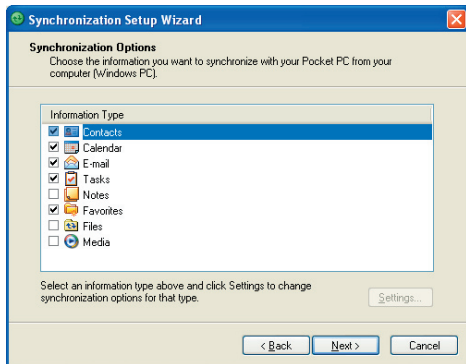


Synchronization Setup Wizard
(Synchronization Options)

6. Setting Up E-mail Accounts

The E-mail Setup Wizard makes it easy and simple to set up your Outlook e-mail and POP3/IMAP4 accounts on your device.

Set up e-mail accounts using E-mail Setup Wizard

1. Tap **Start > Messaging**.
2. Tap **Menu > Tools > New Account** to access the E-mail Setup Wizard.
3. The E-mail Setup Wizard guides you step-by-step through the setup process.

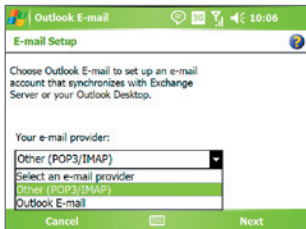


Set up Outlook e-mail

To be able to send and receive Outlook e-mail on your device, you must set up ActiveSync synchronization with your computer or the Exchange Server. For information about setting up ActiveSync synchronisation, refer to the user manual.

Set up a POP3/IMAP4 e-mail account

Set up a POP3 or IMAP4 e-mail account on your device if you have an e-mail account with an Internet service provider (ISP) or an account that you access using a VPN server connection (typically a work account).

1. Tap **Start > Messaging**.
2. Tap **Menu > Tools > New Account**.
3. On the first E-mail Setup screen, select **Other (POP3/IMAP)** from the **Your e-mail provider** list, then tap **Next**.
4. On the next screen, enter your e-mail address, and tap **Next**.

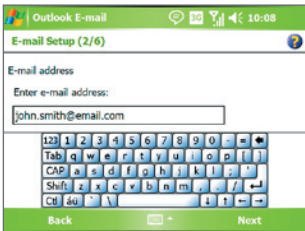

Auto configuration will help you download necessary e-mail server settings.

5. Once Auto configuration has finished, tap **Next**.
 6. Enter your name (the name you want displayed when you send e-mail) and your password.
- Tip** Select the **Save password** check box if you want to save your password so that you do not need to enter it again.


7. Sending a Message

Your device is capable of sending and receiving E-mail, SMS, and MMS messages as long as it is connected to the network. Although you can send text messages (SMS) to only mobile phone numbers, MMS messages can be sent to both mobile phone numbers and e-mail addresses.

Compose and send a message

1. In the message list, tap **Menu** > **Go To** and select an account.
2. Tap **New**.
3. Enter the e-mail address or mobile phone number of one or more recipients, separating them with a semicolon. To access addresses and phone numbers from Contacts, tap **To**.
4. Enter your message.
 - To quickly add common messages, tap **Menu** > **My Text** and tap a desired message.
 - To check the spelling, tap **Menu** > **Spell Check**.
5. Tap **Send**.

Note SMS and MMS can only be sent if your device is connected to a GSM/EDGE network. E-mail messages can be sent only if your device has Internet access (e.g. via GSM/EDGE/GPRS, USB/Bluetooth connection to computer, etc).

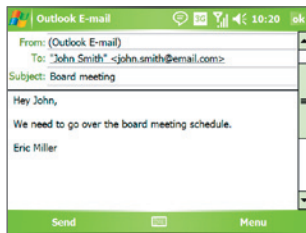



Composing Outlook e-mail message


8. Browsing the Internet

You can set up connections to the Internet or to a corporate network to browse the Internet. The pre-loaded browser, **Internet Explorer Mobile**, is a full-featured Internet browser, and optimized for use on your device.

Use Internet Explorer Mobile

1. Tap **Start > Internet Explorer**.
2. To go to a web site, enter the URL address of the desired web site in the address bar that appears at the top of the screen. Tap the down arrow (▼) to choose one web site from previously entered addresses.
3. Tap the **Go** icon (🔄) to go to the web address you entered.
4. Tap **Menu > Home** to go back to the Home page.
5. Tap **Menu > Favorites**, and then select the favorite web site you want to visit. To add a favorite link while browsing the Internet, go to the page you want to add. Then, tap **Menu > Add to Favorites**, or tap and hold on the page to select **Add to Favorites** from the shortcut menu.

Note Press  on the device while browsing to activate VueFLO. VueFLO lets you scroll through Web pages by tilting the device to the direction you want to scroll. Press  again to deactivate VueFLO.

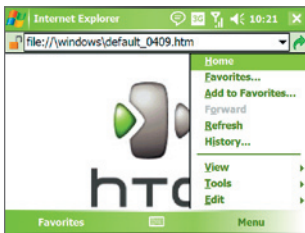


Internet Explorer Mobile

9. Using the Camera

Taking photos and recording video clips along with audio is easy with your device's built-in camera.

Launch the camera





- Press the **CAMERA** button on your device.
- Tap **Start > Programs > Camera**.
- Tap **Start > Programs > Pictures & Videos**, then tap the **Camera** icon.

To exit the camera, tap the **Exit** icon () on the screen.





Camera screen

Capture a still image

1. After launching the camera, tap  or  at the upper left side of the screen or press **NAVIGATION** left or right to select the **Photo** capture mode.
2. Press the **CAMERA** button halfway to activate autofocus ().
3. When autofocus is set () press the **CAMERA** button all the way to take the shot.


Capture a video clip

1. After launching the camera, tap  or  at the upper left side of the screen or press **NAVIGATION** left or right to select the **Video** capture mode.
2. Press the **CAMERA** button or the **CENTER OK** button to start recording a video clip. To stop recording, press the **CAMERA** button or the **CENTER OK** button again.

10. Using Pictures & Videos

The Pictures & Videos program collects, organizes, and sorts all of your captured images and video clips on your device.

You can use this program to view/play pictures, GIF animation, and video clips. You can even view pictures as a slide show, beam them, send them via e-mail, edit them, or set them as the background on the Today screen.

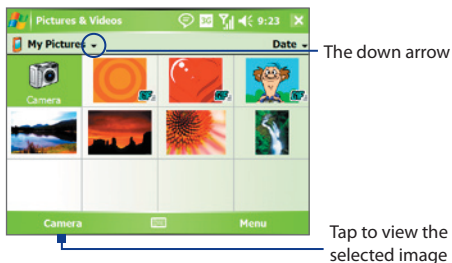

View pictures


1. Tap **Start > Programs > Pictures & Videos**. The files in the My Pictures folder appear as thumbnails by default.
2. Select a picture and tap **View**.

Play GIF animation files

1. Tap **Start > Programs > Pictures & Videos**.
2. Select a GIF animation file and tap **View**. The GIF Animation program then opens and plays the animation.

Play videos

1. Tap **Start > Programs > Pictures & Videos**. By default, the contents of the My Pictures folder will be shown.
2. To find the video clips that you captured, tap the down arrow (▼) next to the My Pictures folder and tap My Documents. Next, tap My Videos. Video clips are displayed as thumbnails by default, which appear with a media icon (📺).

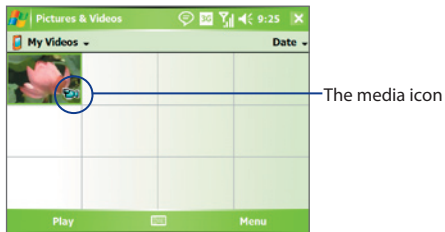






3. Tap the desired thumbnail to play it with the built-in Windows Media Player.

11. Entering Information

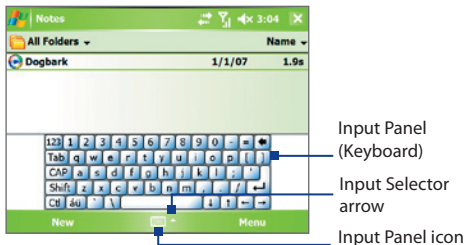When you start a program or select a field that requires text or numbers, the **Input Panel** icon becomes available on the menu bar.

Tap the **Input Selector** arrow (that appears next to the **Input Panel** icon) to open a menu where you can select a text input method and customize input options. After selecting a text input method, the corresponding Input Panel is then displayed and you can use it to enter text. To toggle between showing and hiding the Input Panel, simply tap the **Input Panel** icon.



Icon	Input method
	On-screen keyboard
	Letter Recognizer or Block Recognizer
	Symbol Pad
	Transcriber

Note Some text input methods may not be available in certain language versions of the device.

12. Customizing Your Pocket PC Phone

You can customize the look and feel of your device and set the time and date according to the current time zone.

Customize the Today screen


1. Tap **Start > Settings > Personal tab > Today**.
2. On the **Appearance** tab, select the desired theme for the background of the Today screen.
3. On the **Items** tab, select the items you want to appear on the Today screen.

Customize the Start Menu


1. Tap **Start > Settings > Personal tab > Menus**.
2. Select the check boxes of the items you want to appear in the Start menu. You can select up to seven items.

Set the time and date

1. Tap **Start > Settings > System tab > Clock & Alarms**.
2. Select the correct time zone and change the date or time.

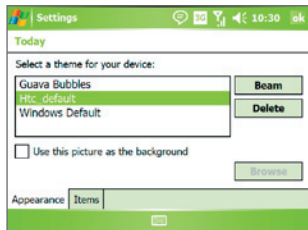

Today settings

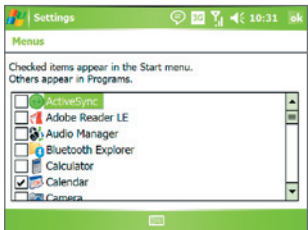

Menu settings

13. Securing Your Pocket PC Phone

There are two kinds of security on your device. You can protect your SIM card from unauthorized use by assigning a **PIN** (Personal Identification Number). Additionally, you can prevent unauthorized access to any part of the device by using password protection.

Protect your SIM card with a PIN

1. Tap **Start > Phone**.
2. On the Phone screen, tap **Menu > Options > Phone** tab.
3. Tap **Require PIN when phone is used**. To change the PIN at any time, tap **Change PIN**.



Setting up your PIN

Protect your device with a password

1. Tap **Start > Settings > Personal** tab > **Lock**.
2. Select the **Prompt if device unused** for check box, and in the box to the right, select how long your device must be idle before a password is required. In the **Password type** box, select the type of password you would like to use. Enter the password and confirm it.
3. On the **Hint** tab, enter a phrase that will help you remember your password, but doesn't allow others to guess your password. The hint will be displayed after the wrong password is entered four times.
4. Tap **OK**. The next time your device is turned on, you will be prompted to enter your password.



Setting up password


14. The Subdisplay

The Subdisplay lets you view notifications, music info, weather, temperature and time on a designated area on the LCD screen when the keyboard is attached to the LCD screen of the main unit. The Subdisplay is automatically activated when the keyboard is pressed against the LCD screen.

Note Weather, world time and temperature information are only available if the WorldMate® software is installed.



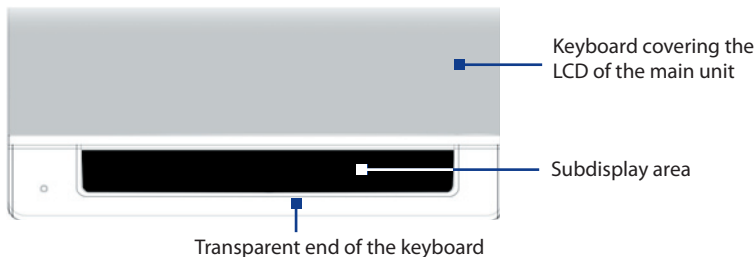


 








To change Subdisplay information shown

You can change the information shown on the Subdisplay by sliding the Volume Slider up or down. Slide the Volume Slider up or down until you see the information you want displayed.















15. Status Indicators

The Today screen displays important information, such as upcoming appointments and status indicators. Following are some of the status icons that you may see on your device:

Icon	Description
	New e-mail or text messages; SMS notification of voice mail
	New multimedia (MMS) message
	New MSN message
	There are more notifications. Tap the icon to view all.
	Speakerphone on
	Dialing while no SIM card is inserted
	Voice call in progress
	Calls are forwarded
	Call on hold
	Missed call
	Maximum signal strength
	No signal
	Phone is turned off
	No phone service

Icon	Description
	Searching for phone service
	GPRS / EDGE available
	GPRS / EDGE connecting
	GPRS / EDGE in use
	3G UMTS network available
	3G UMTS connecting
	3G UMTS in use
	Roaming
	Connection is active
	Connection is not active
	Synchronization in progress
	Synchronization error
	ActiveSync notification
	Wi-Fi function enabled, but device not connected to a wireless network yet
	Wireless network(s) detected
	Connecting to wireless network (arrows moving); Connected to wireless network

Icon	Description
	Synchronizing via Wi-Fi
	Sound on
	Sound off
	Alarm
	No SIM card inserted
	VueFLO activated
	Battery is fully charged
	Battery power is very low
	Battery charging
	Bluetooth headset detected
	QuickGPS update notification
	Serial USB connection active

Note The USB to PC () icon appears on the Today Screen when your device is connected to your computer and you enable a serial USB connection between them. For more information about USB to PC, refer to the user manual.

16. More Information

For more instructions, refer to the User Manual or contact your local dealer for assistance.